



OLTENS

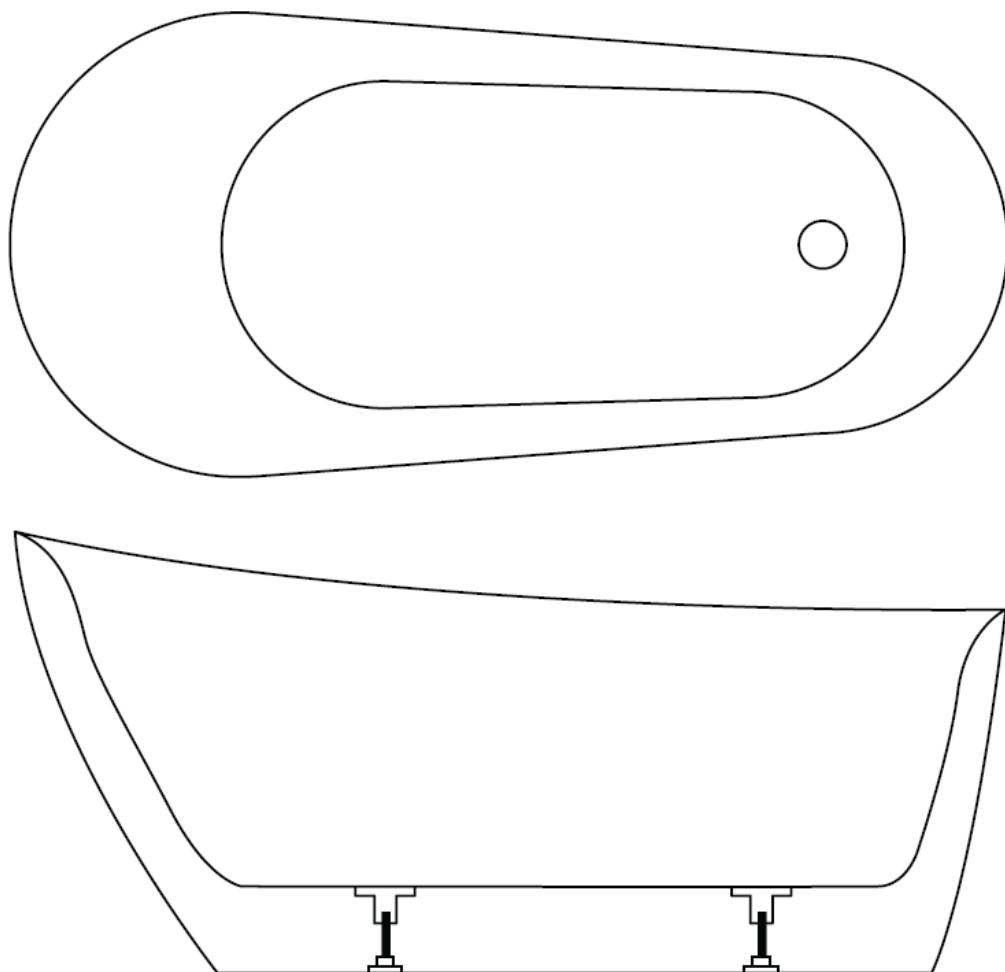

Floor standing bath
– installation instructions


1

During installation, the bath should be handled upside down. Do not lay it on the side or handle it using the panel.

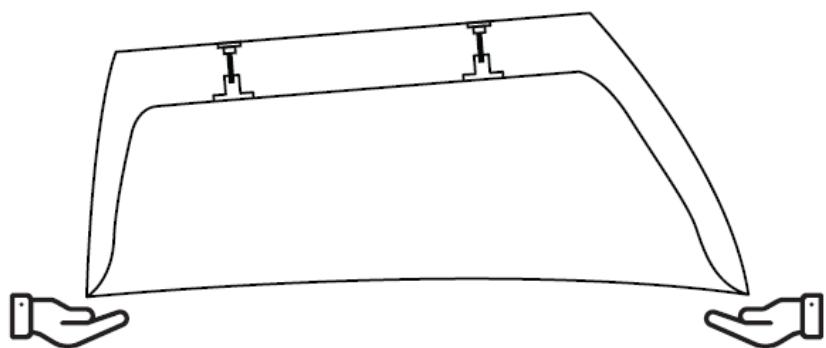


2

Verify that the floor on which the floor standing bath is to be installed is even for later levelling.

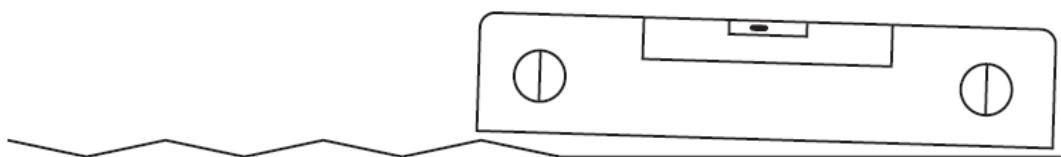


3

A spirit level and silicone sealant are required for installation. The remaining components, i.e., the push button bath waste and the outlet pipe, are attached to the bath. The push button bath waste and the outlet pipe are factory installed. The bath also has a built-in mounting frame. To install the bath, we recommend using the bath waste with the outlet pipe attached to the bath.

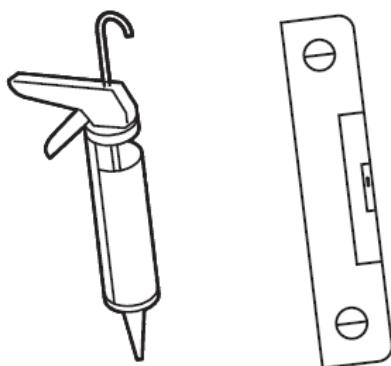


4

Place the bath at the installation location.

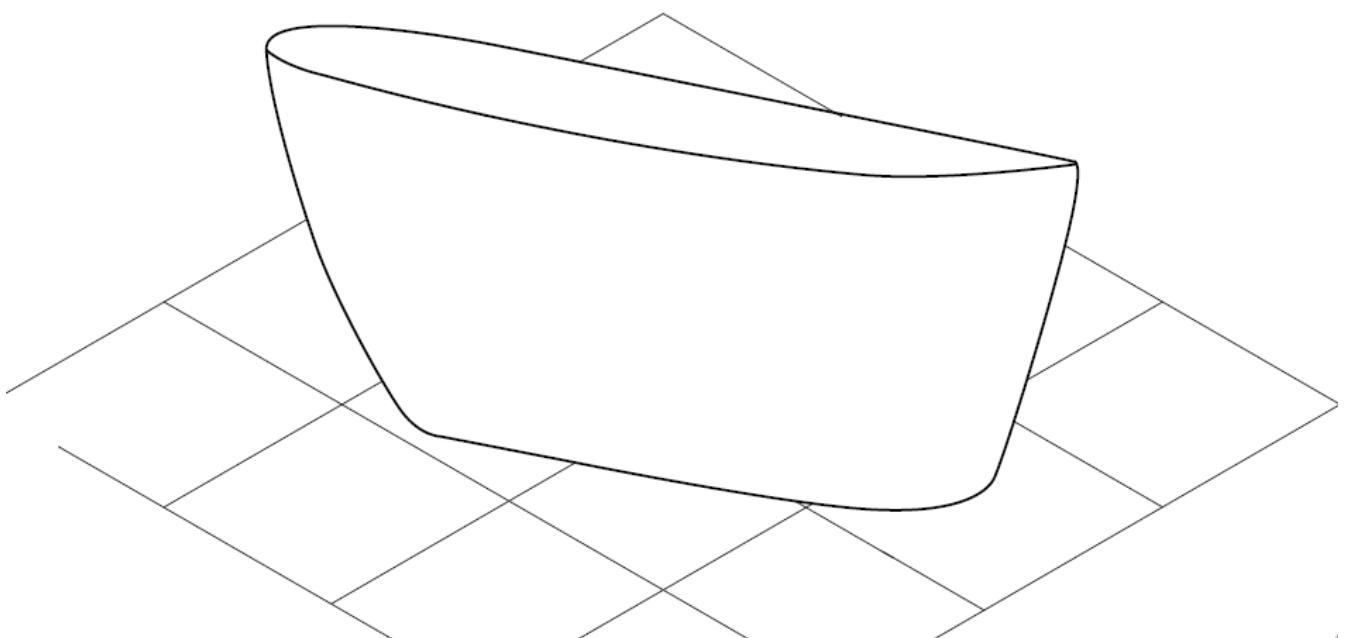


5

Connect the outlet pipe to the drainage system.




6

Before the final installation, connect the bath to the drainage system and check the tightness of the outlet system.

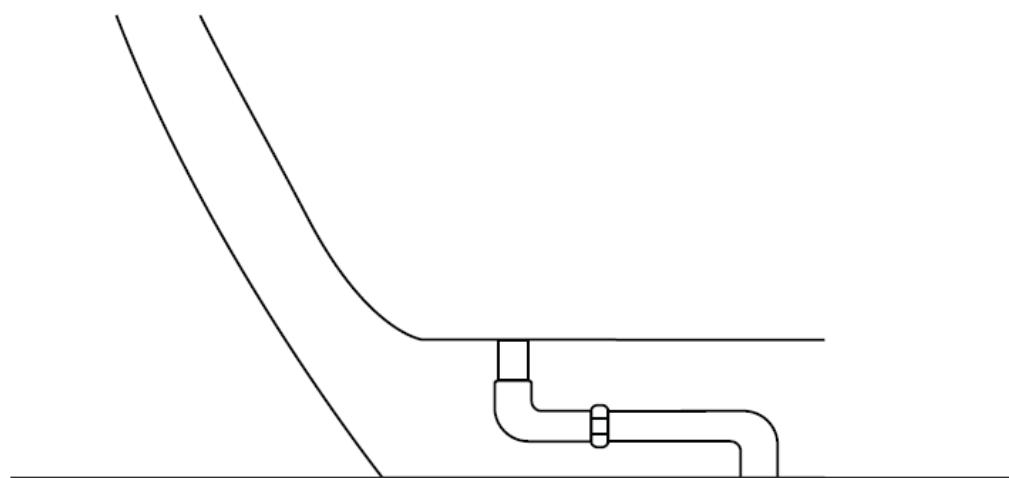


7

Check if the bath is level. Adjust the screws of all the bath feet to fully level the bath.

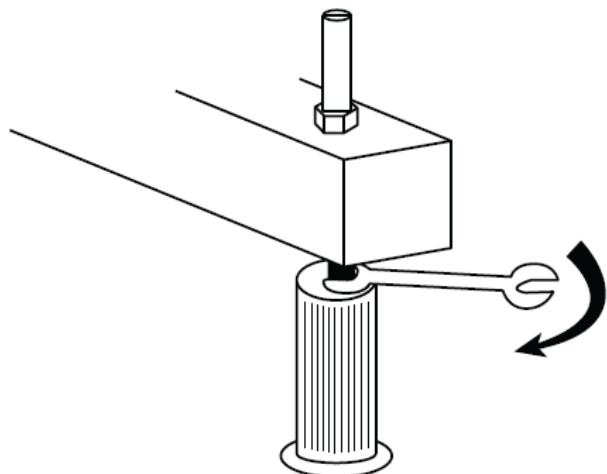


8

Fill the bath with water and perform a leak test.

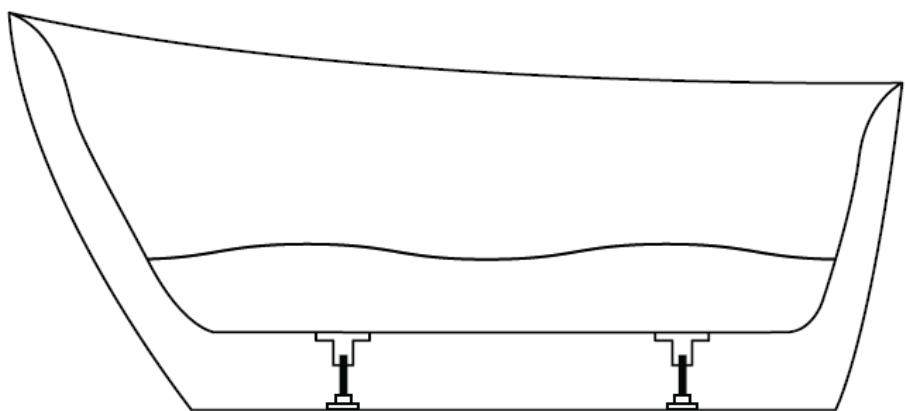

9

To complete the installation, seal the space between the bath and the floor with silicone sealant (preferably with a dispenser).

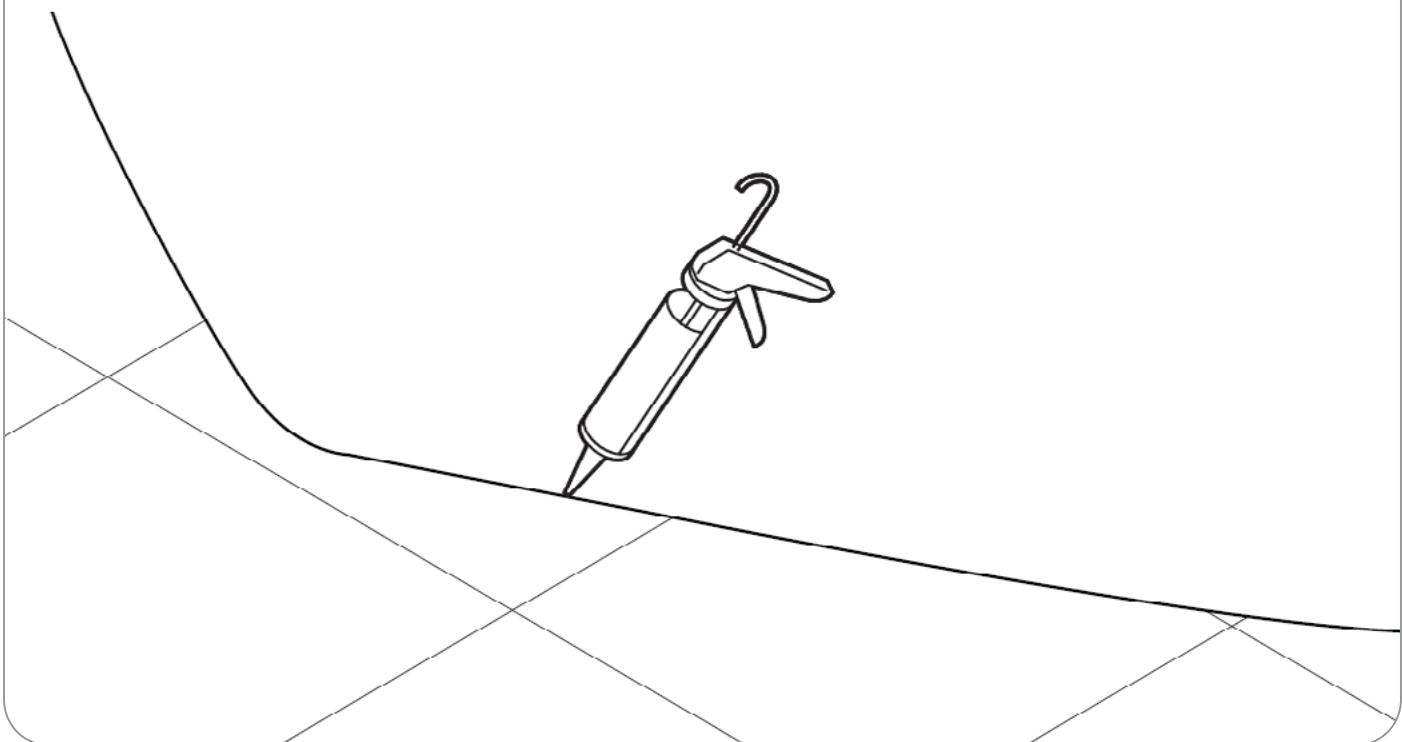

Care and maintenance

Flush with clean water and wipe with a soft cloth only.

For heavier deposits, it is recommended to use special acrylic surface cleaning agents, preferably professional Oltens products from the NanoCare and NanoShine series.

Never use agents containing alcohol, disinfectants, solvents and strong bases.

Never clean the surface of the bath with rough cloths or cleaning agents containing abrasive materials and acids.

